

**MCX Yamaha Sidewinder /
Arctic Cat 9000
racing exhaust headers**





Take off the side fairings, the hood, the seat, the frame stays over the fuel tank and the fuel tank. Take off the heat cover on top of the turbo and on top of the stock exhaust manifold.


Take off the exhaust pipe between the exhaust manifold and turbo and then also the exhaust manifold.

Install the racing headers to the engine. Re-use the stock gasket.

If necessary, loosen the bolts under the turbo so it can move a little when you tighten the V-band clamp. Then tighten the bolts again under the turbo.



The heat cover plate above the headers must be modified to fit the new headers.

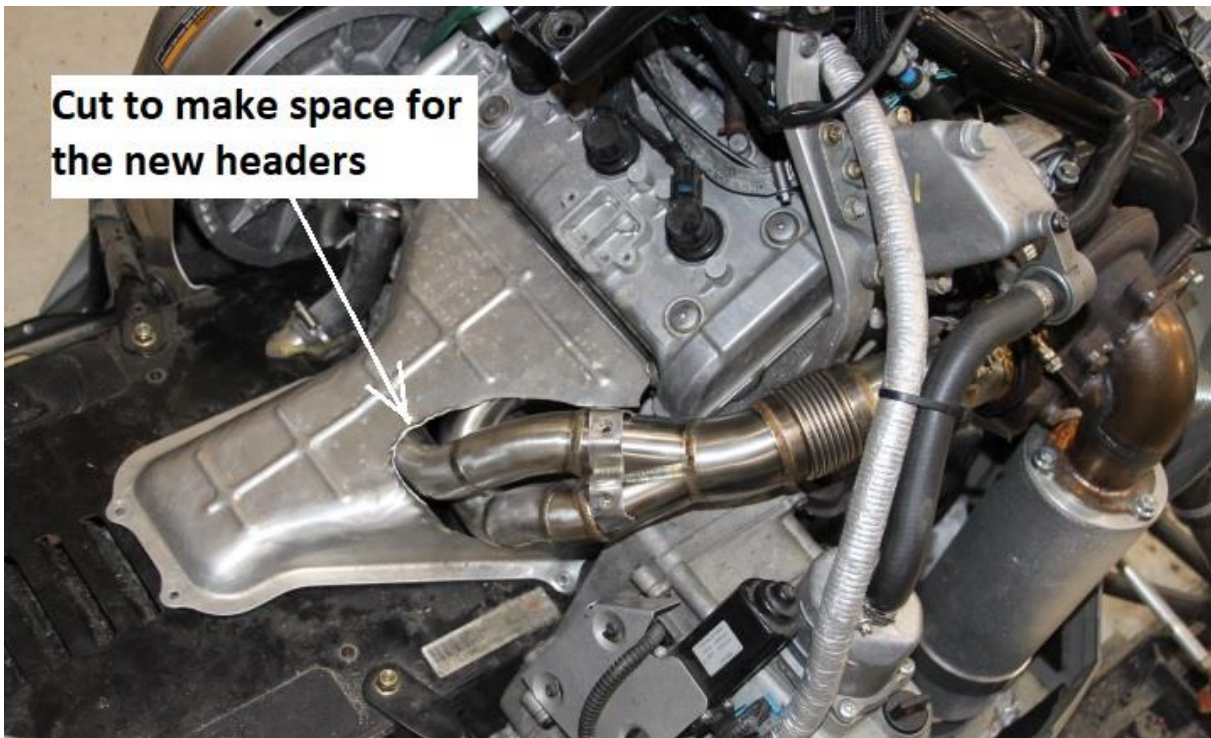



Install the second heat shield. If necessary adjust the location of the holes in the shield until it fits by pushing them in the right direction. Install the heat shield above the turbo, the fuel tank etc.

Done! Go out and run your more powerful snowmobile!

