

Installation manual turbo kit
Suzuki GSXR 1300 08-16

MC Xpress AB
Norra Altervägen 821
945 92 ALTERSBRUK
Sweden

Tel: +46 911 202005
Fax: +46 911 202008

www.mcx.se



Introduction

Thank you for choosing the MC Xpress turbo kit to your Suzuki GSXR 1300.

The turbo kit is designed for racing use only.

The turbo kit is designed to give you the best performance possible together with reliability. During the development work we have tried to keep the vehicle as stock as possible and the installation work as easy as possible.

Read this manual carefully before you start with the installation.

We hope you will get much joy with your new investment.


Take it easy especially in the beginning.

The turbo side by side machine is only recommended to be used by experienced riders.

MC Xpress does not leave any warranty except 1 year on the parts included with the kit.

The warranty does not cover damage on other parts even if it's caused by the turbo parts or installation.

- This turbo kit greatly enhances the performance of the vehicle it is installed upon!
- Professional training should be received by anyone that operates this modified vehicle.
- Installation of this turbo kit may void any warranty that is provided by the vehicle manufacturer.
- A one (1) year warranty is provided on the kit parts only. This warranty does not cover any other parts even if the damage is caused by the installation of the turbo kit.
- MCXpress AB, its distributors, dealers, nor installers will not be held liable for any personal or physical damaged obtained in association with the installation or use of this product.
- By installation or purchase of this product, the end user and or installer agree that the end user has been informed of this information.

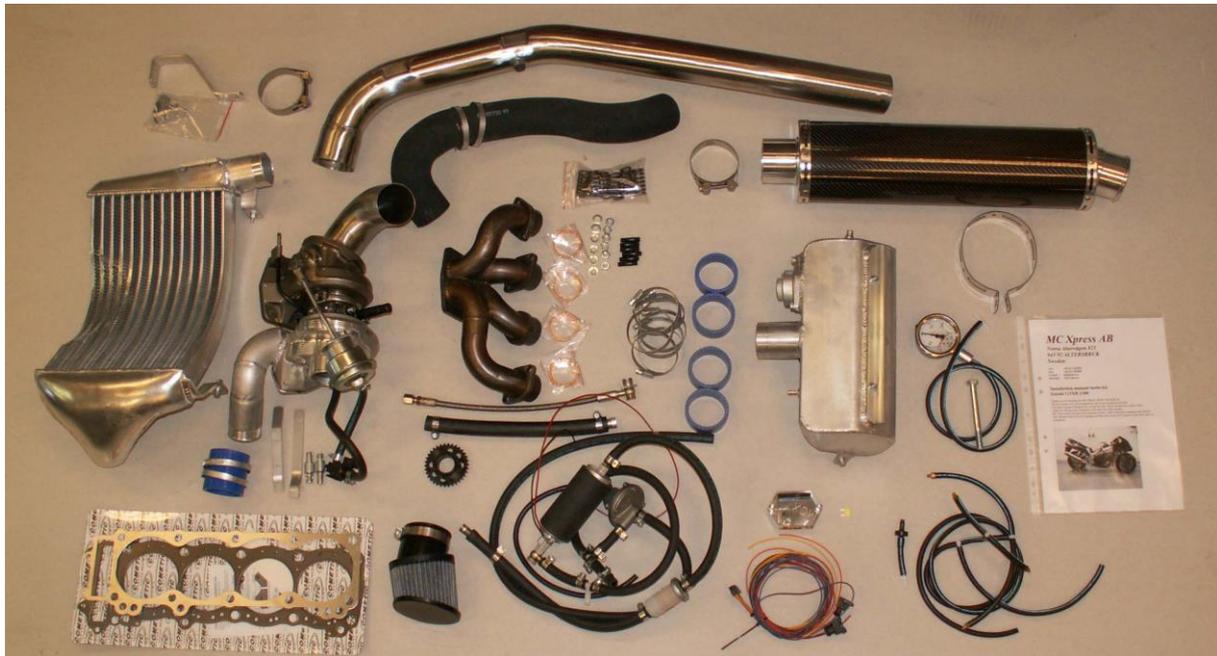

Installing base gasket

To make it possible to get high performance, the compression ratio has to be lowered.

This is made by installing a 2 mm thick cylinder spacer.

The easiest way to do this is to remove the engine from the frame.

Start to remove the side fairings of the bike. Drain water and oil. Remove the stock exhaust system and mufflers from the bike. Continue with air-box, throttle bodies, radiator, and finally the whole engine.

Before removing the camshafts, check the valve clearance. Proper clearance for intake is 0, 10-0, 20 and exhaust 0, 20-0, 30.

Remove the cylinder head and the cylinder.

Installing M12 cylinder screws:

We recommend to use M12 cylinder bolts.

This modification will make the engine much more reliable.

Drill 12, 5 mm holes for the new screws in both the cylinder head and the cylinder.





Remove the pistons and put tape to avoid chip from falling in the engine.
Make the holes in the engine block larger by drilling a 10 mm hole.
Make M12 thread by using a thread tap. Be careful so you make the threads in a 90 deg. angle to the cylinder base surface.

Install the cylinder. Be careful with the piston rings. Use two stud-bolts (if possible) to guide the cylinder. Start with piston number 2 and 3.


Install the new head gasket and the cylinder head.
Put motor oil on the threads and under the head of the new cylinder bolts
The head nuts shall be tightened in three steps, 30 Nm, 70 Nm and finally 100 Nm.
Then open the screws 30 degrees and tighten them 100 Nm once again.
Always start tighten from the middle of the cylinder head and towards the sides. The M6 cylinder head bolts shall be tightened 10 Nm.

Plug the 4 small exhaust channels in the valve cover.
Use M10 thread tap. Use thread sealant when installing the plugs.




Installing camshafts

The camshafts will turn a few degrees when raising the cylinder head.
Install the adjustable cam sprockets included with the kit on both intake and exhaust camshaft. Install the new sprockets so the marks are about in the same positions as it was on the stock cams.

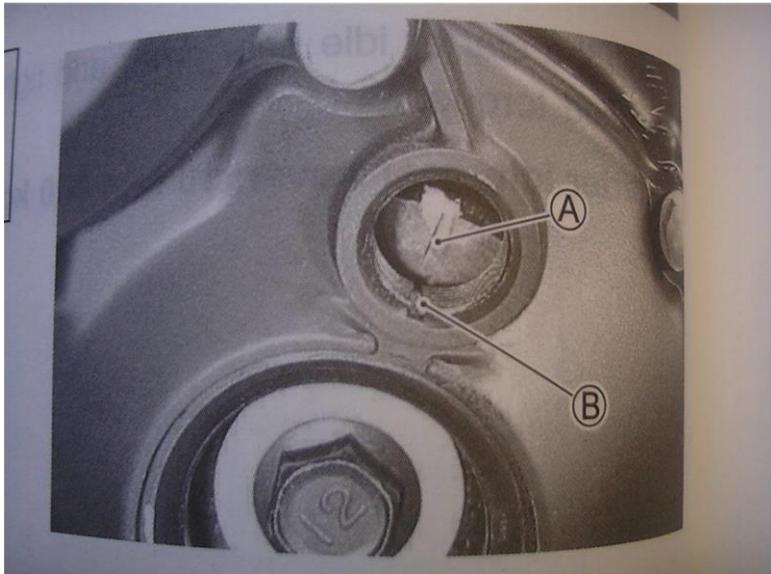


Turn the engine until cylinder number 1 and 4 is in TDC.
(See upper photo)

The Exhaust camshaft shall be turned with the arrow marked 1 on the cam sprocket pointed forward (see photo below).

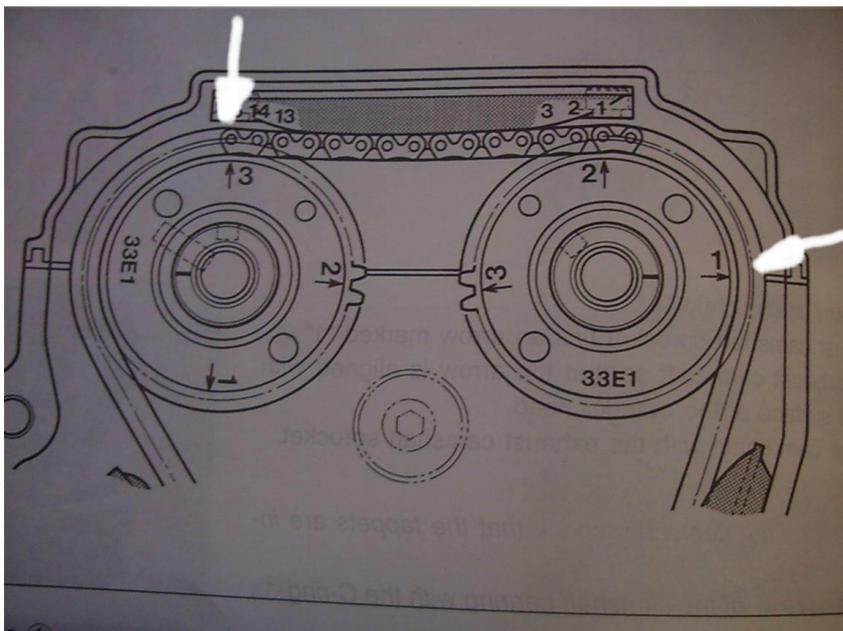

And the intake camshaft shall be installed with the arrow marked 3 pointed upwards.

To avoid problems, secure the cam chain to the cam sprocket (both intake and exhaust) with a cable tie.

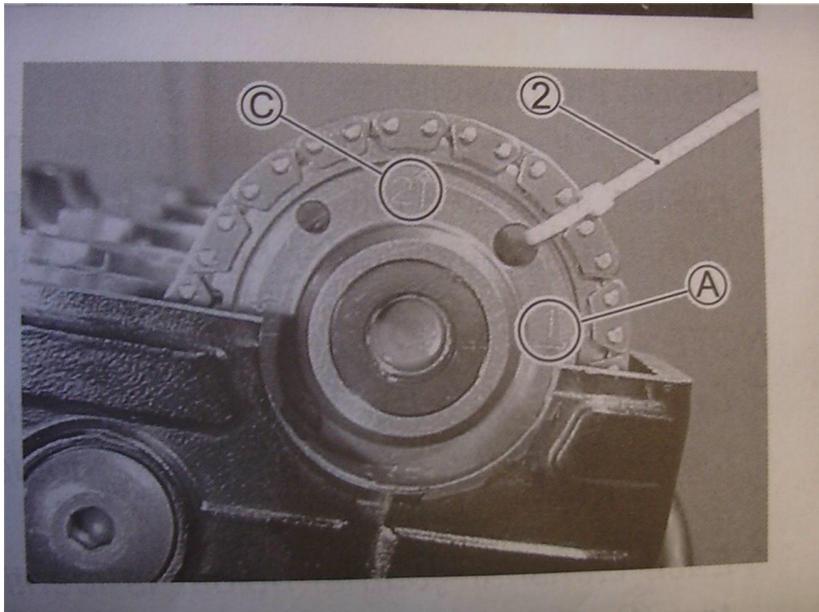

The torque on the camshaft cap bolts (M6) is 10 Nm.
Install the cam chain tensioner.

A 3 mm spacer shall be installed between the cylinder head and the cam chain tensioner.
Use two new longer screws supplied with the kit for the tensioner.


Remove the cable ties, and turn the engine and make sure the cams are in the right position.
You can now check the valve clearance again, just to make sure all the shims are in their right position. In 0, 10-0, 20 and ex 0, 20-0, 30.

Set the lobe centre to 105 to 107 degrees.

Use a degree wheel on the crankshaft and a dial indicator on the valve lifter when doing this.



To be able to set the degree wheel to 0 at TDC, we recommend installing a stop for the piston where the spark plug hole on cylinder number one or four. Make sure the pistons 1 and 4 are not at TDC . (Top dead centre) when installing the piston stopper.

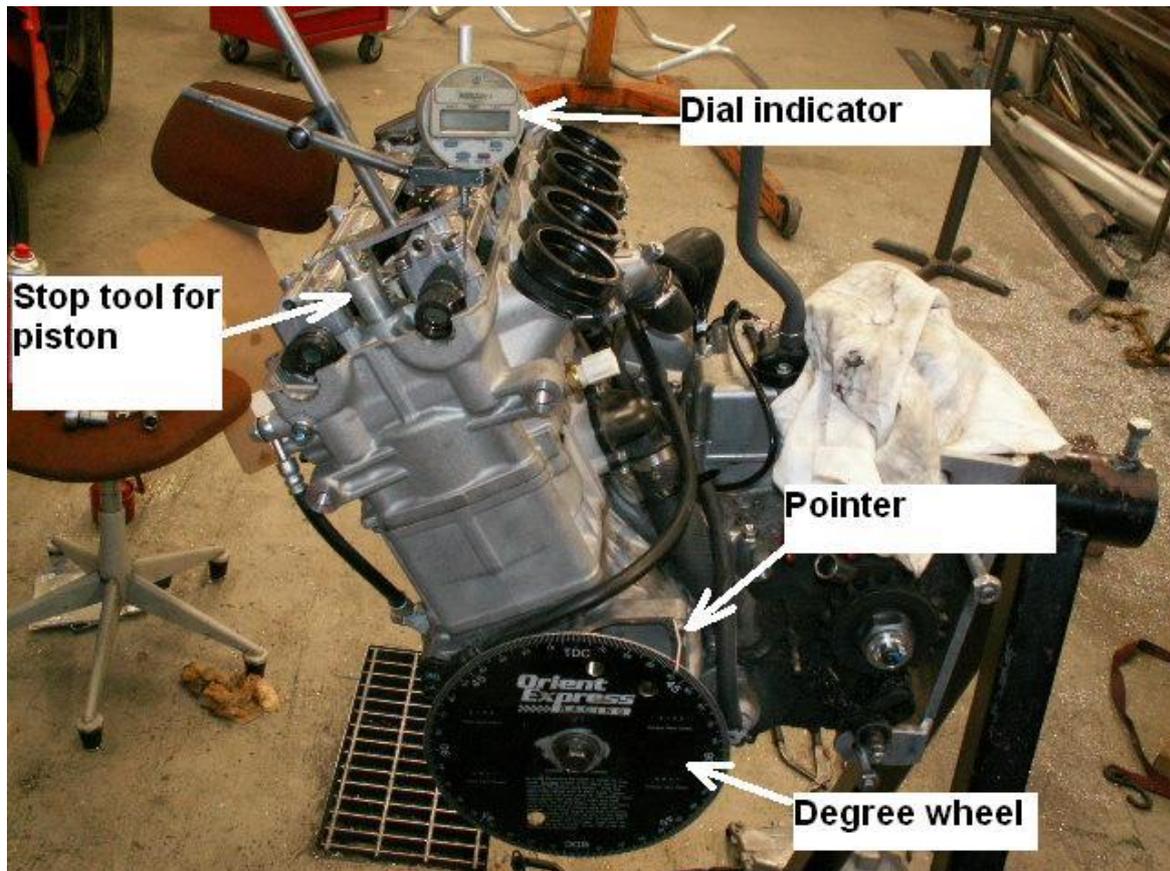

Rotate the crankshaft carefully until the piston hits the stopper. Note the position of the degree wheel at the pointer. Rotate the crankshaft in the other direction until the pistons hits the stopper again. Note the position and adjust the pointer until you get the same angle before TDC in both directions. Now you can remove the piston stopper.

How to calculate lobe centre: Intake: Install the dial indicator on valve lifter like the picture. Rotate the crankshaft (use a wrench from the opposite side of the crankshaft) until the valve lift is 1,00 mm. Note at the pointer how many degrees it is before TDC. (We use as an example 13 degrees.) Rotate the engine again until it's 1 mm left until the valve is closed. (We use as an example that this happens 39 degrees after BDC (bottom dead centre)) The lobe centre is: $(180-13+39)/2=103$ degrees. Adjust the position of the cam sprocket until you reached 105 to 107 degree lobeC. Use thread lock on the cam screws.

Make the same procedure on the exhaust cam. Example of settings: The cam opens 1 mm at a 40 degrees before BDC and close about 8 degrees after TDC. LobeC is: $(180-8+40)/2 = 106$ degrees. We recommend 105-107 degree lobeC on also on the exhaust.

Clutch modification:

The stock clutch has to be modified to stand the extra torque. Remove the stock clutch springs and install the new stiffer ones supplied with the kit.

Installing the turbo

It is easier to install the exhaust manifold and turbo to the engine before you install the engine in the frame.

Install four M8 stud-bolts on the cylinder head on the lower side of the fittings to the exhaust manifold.



First install the exhaust manifold to the cylinder head.

Use the stock exhaust gaskets if they are in a good shape; otherwise replace them with new ones.

Then install the turbo to the exhaust manifold.

No gasket is required between the manifold and the turbo.





The oil line to the turbo is connected from the right side of the engine. Remove the oil plug under the engine cover and fit the oil hose here.

The oil return from the turbo shall be connected to an oil tube in front of the oil pan. Take off the oil pan and weld on this tube like the picture below.




When the cylinder and cylinder head is raised 2 mm some modifications must be done on the frame to make it fit. Make the holes oval by grinding 2 mm upwards. Make this before the engine is installed in the frame.

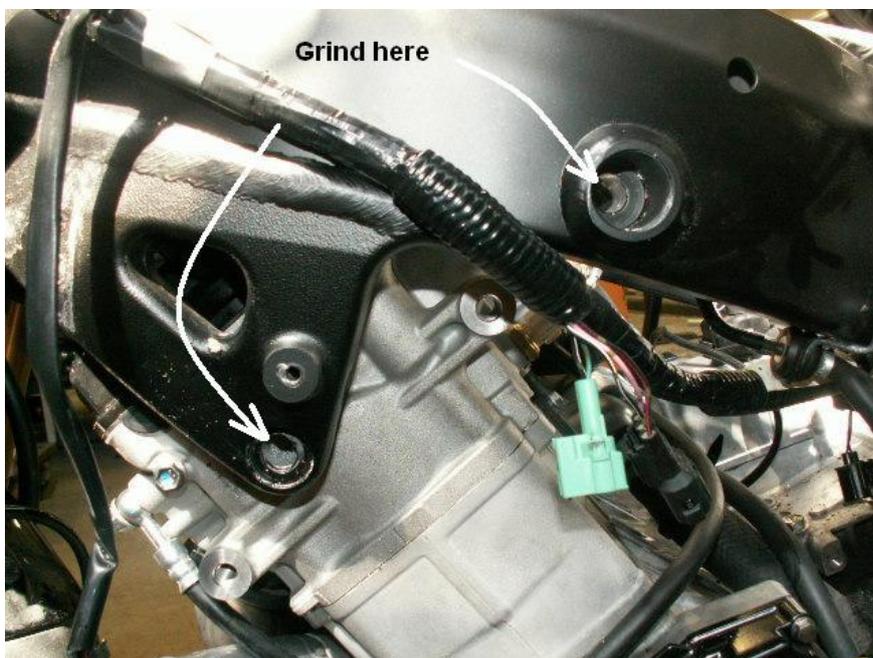

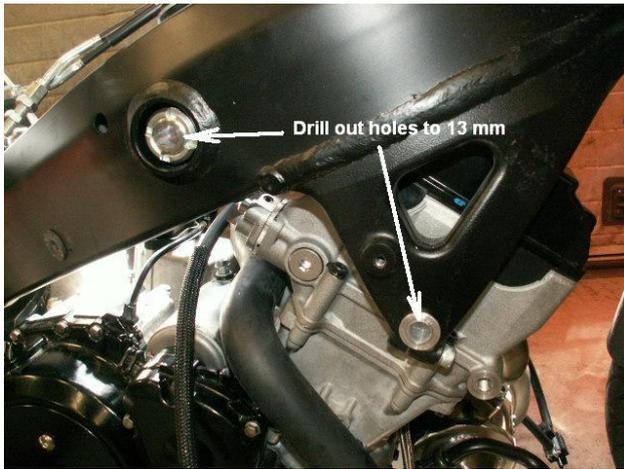

Drill out the right side adjustable engine spacers to 13 mm.

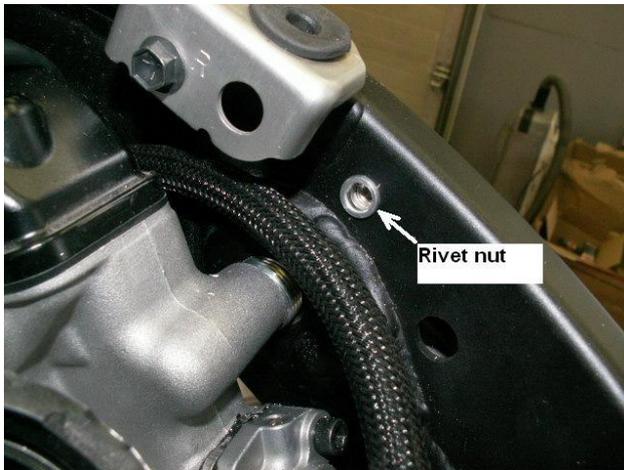

When the plenum shall be installed, a stay shall be installed between the frame and plenum. Install a rivet nut on each side like the picture. The location of the nut is not so important. You have to drill the hole in the stay later when installing the plenum. Drill a hole on the inside of the frame and install a rivet nut on each side.



Install the engine to the frame again.

Exhaust pipe and muffler

Install the exhaust pipe and the muffler to the bike.

Remove the oxygen sensor from the stock exhaust system and install it to the new exhaust pipe.

Water cooler installation.

The water cooler shall be installed very close to the exhaust headers.

Cut off the centre/lower stay on the water cooler.



The intercooler shall be fit with 2 screws on the top of the water cooler.


Put the intercooler in its place and mark where to drill in the water cooler.

Make a 6, 5 mm hole.



One ear of the water cap has to be cut off.

The intercooler and water cooler has to be installed as a unit on the bike.

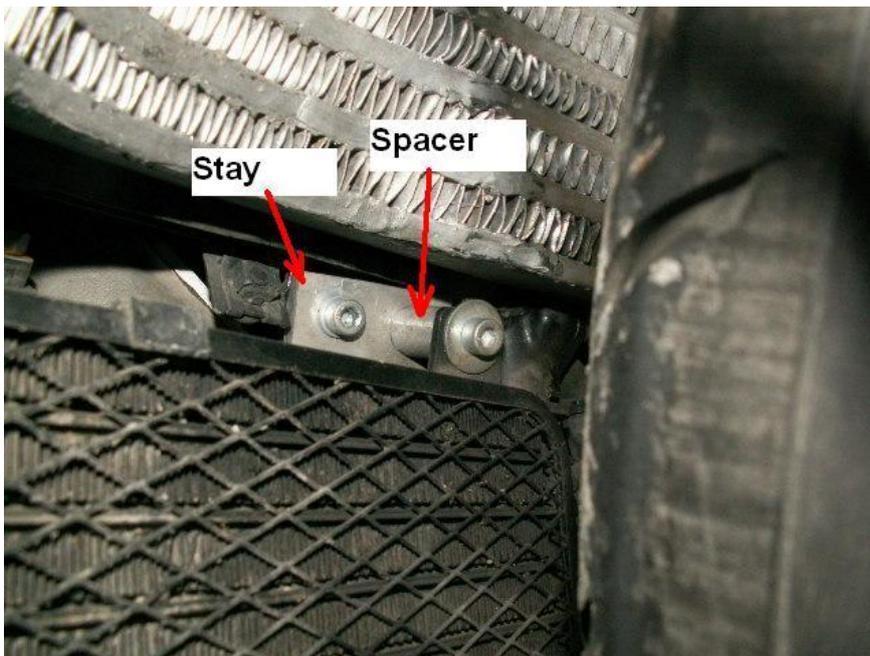

The stock oil cooler can be used. On the left side (view from the drivers seat) a stay and a bracket shall be installed (see upper picture)



The right oil hose can be used. You may have to bend it a little close to the oil cooler to make space for the right oil cooler screw. Install a heat protector on the hose.



A new stay shall be installed on the lower side of the oil cooler.
Use stock rubber mounts.




The left side oil hose/tube can also be used but must be modified and bend a little to fit.




Remove the right air intake tube from the bike.
Cut off the under section of the tube like the picture to make space for the hose between the intercooler and the plenum.

Fuel pump installation

The stock fuel pump inside the tank is too small and shall be removed. A new larger fuel pump is supplied with the kit.

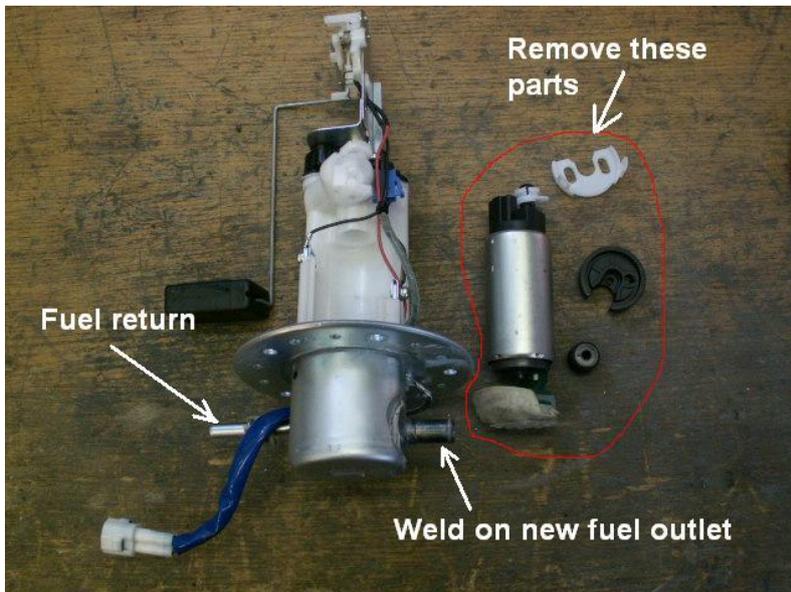

Remove some parts from the fuel pump assy inside the tank.
Weld on a new steel tube for the fuel outlet.
Use the stock fuel outlet as a fuel return.

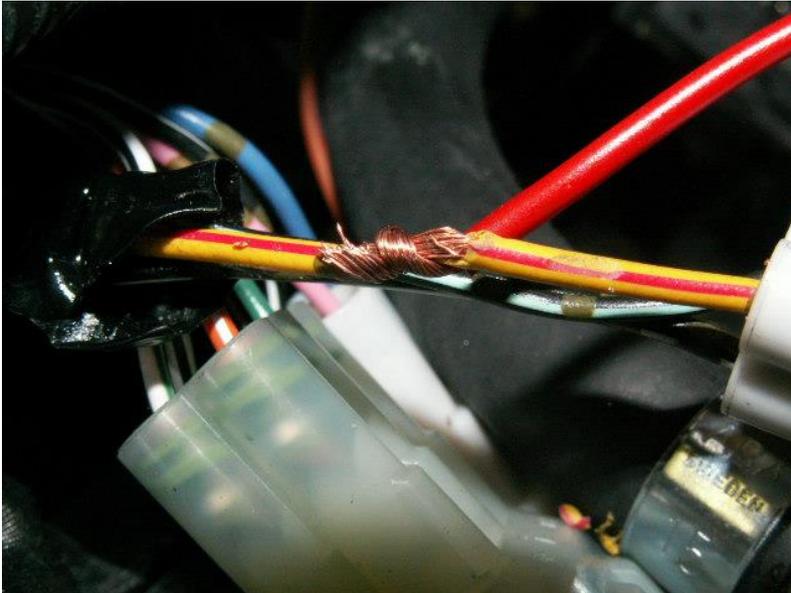

The wire to the new fuel pump shall be connected to this wire (see picture above)
Use solder.

The black – wire shall be connected to ground on the engine.



The fuel pump fuse shall be replaced to a 20 Amps fuse.

Throttle body modification

The throttle body has to be modified.




Remove the eternal butterflies inside the throttle body.

Cut the hose leading to the stock MAP-sensor.

Install the T on the 4 mm vacuum hoses including with the kit.

One hose is leading to the blow off valve located in front of the plenum, the other hose shall be connected to the MCX EFI-box located under the passenger seat.

A MAP-sensor voltage limiter must be installed on the wires to the stock MAP-sensor to avoid error codes on the dashboard.

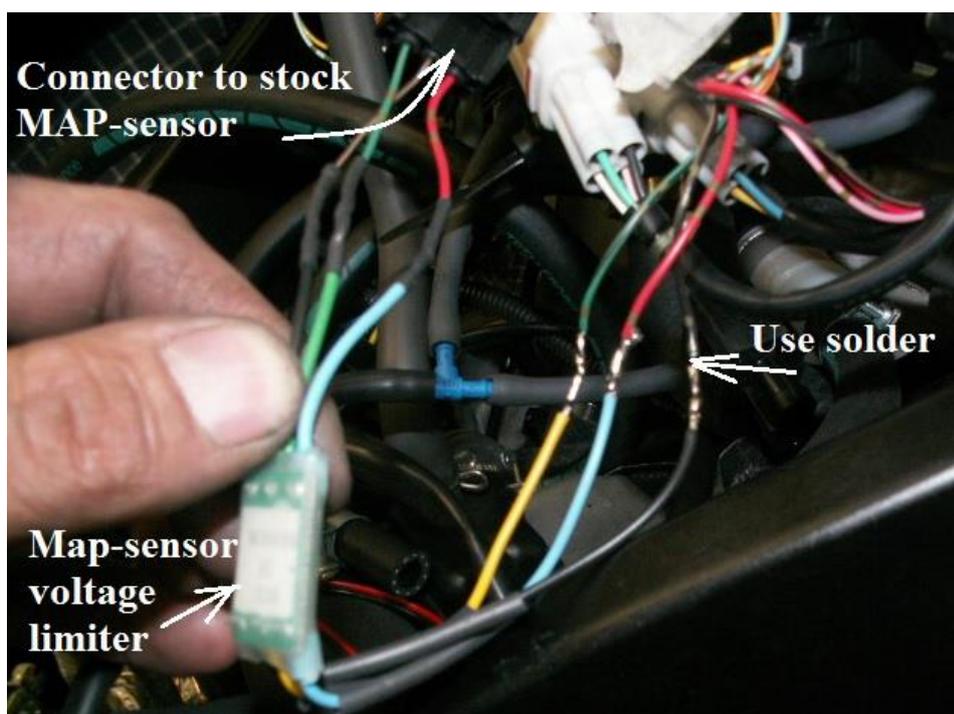


Plenum installation

Install the plenum on top of the throttle body.

Use the four 28 mm long and 54 mm diameter hose and 8 hose clamps.

To prevent the plenum from blowing off, one stay on each side shall be installed.

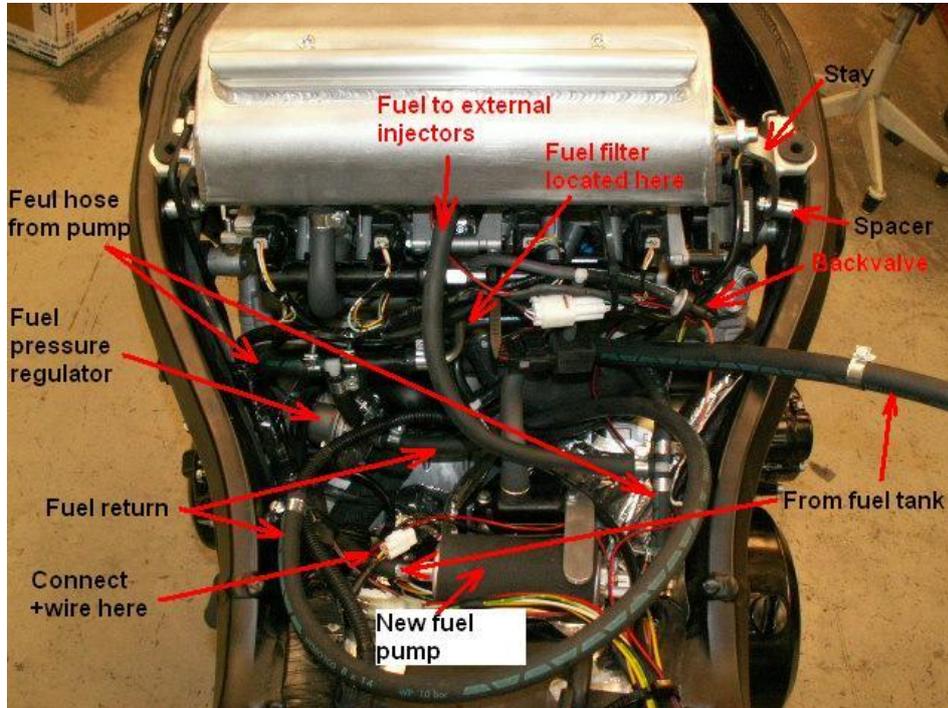


Install the plenum. Install the stays between the plenum and the rivet nuts.

A spacer shall be used on each side between the stay and the rivet nut.

Adjust the alu-stays and drill holes to make them fit properly.

The engine ventilation hose that originally was connected to the air box shall now just vent out in the air. Make sure the hose is not bent or squeezed.

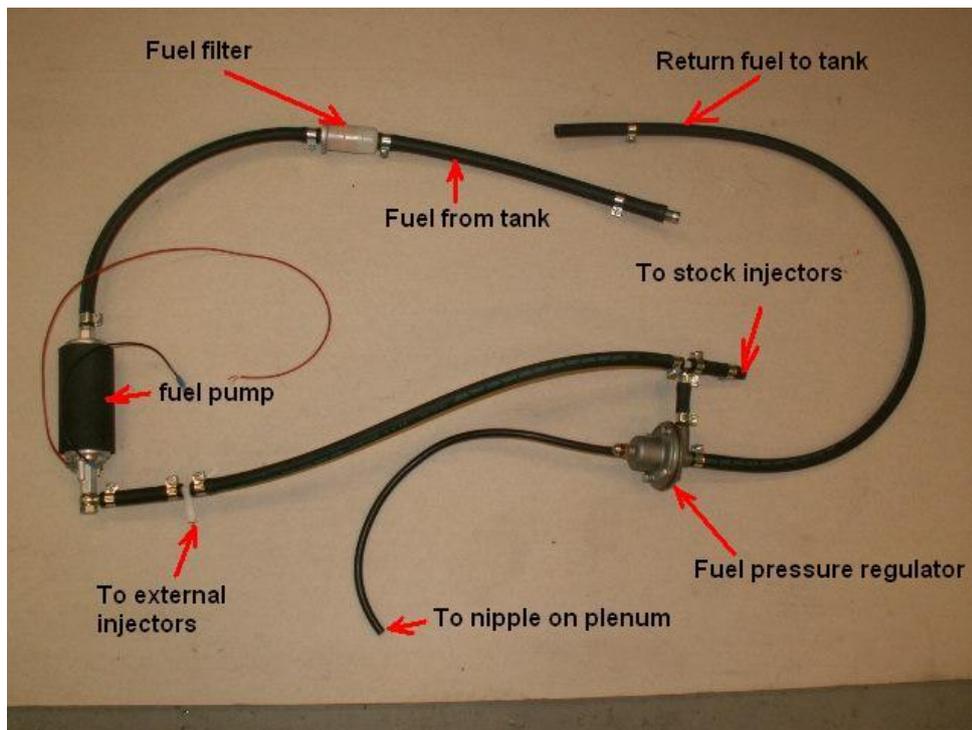


Remove the temp sensor from the stock air box and strap in inside the left air intake tube.


External EFI-system

Install the new EFI box under the passenger seat like the picture.
Install the black -cable to the battery ground.




- The injectors shall be connected to the short black and red double wire from the EFI-box. (All injectors will open at the same time)
The red wire shall be connected to a +key wire on the bike.
We recommend connecting it to this wire close to the stock EFI and ignition control box.

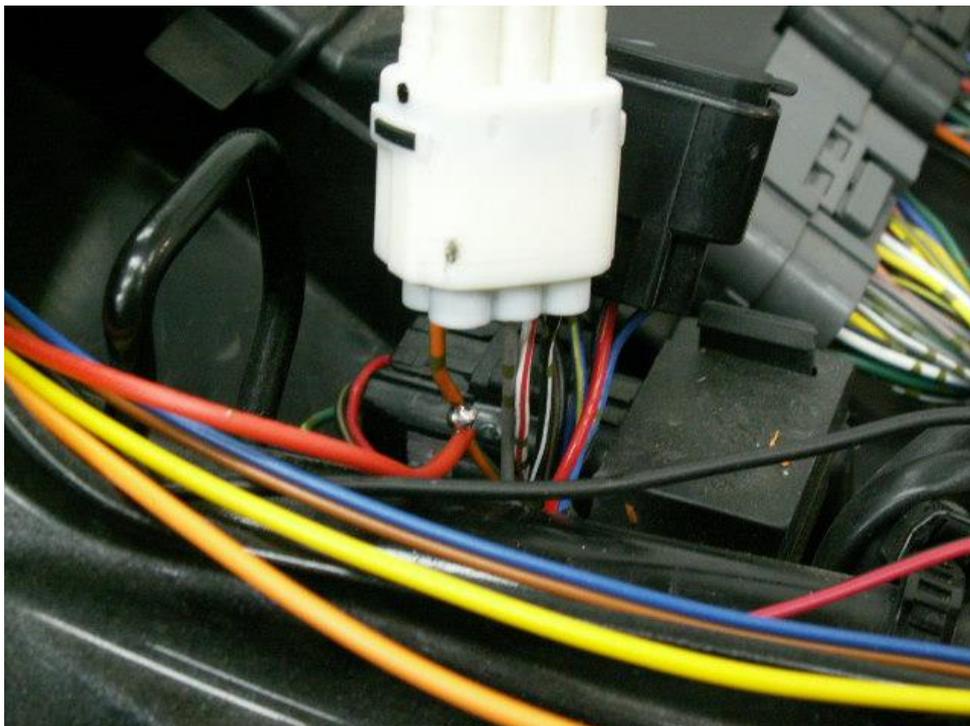

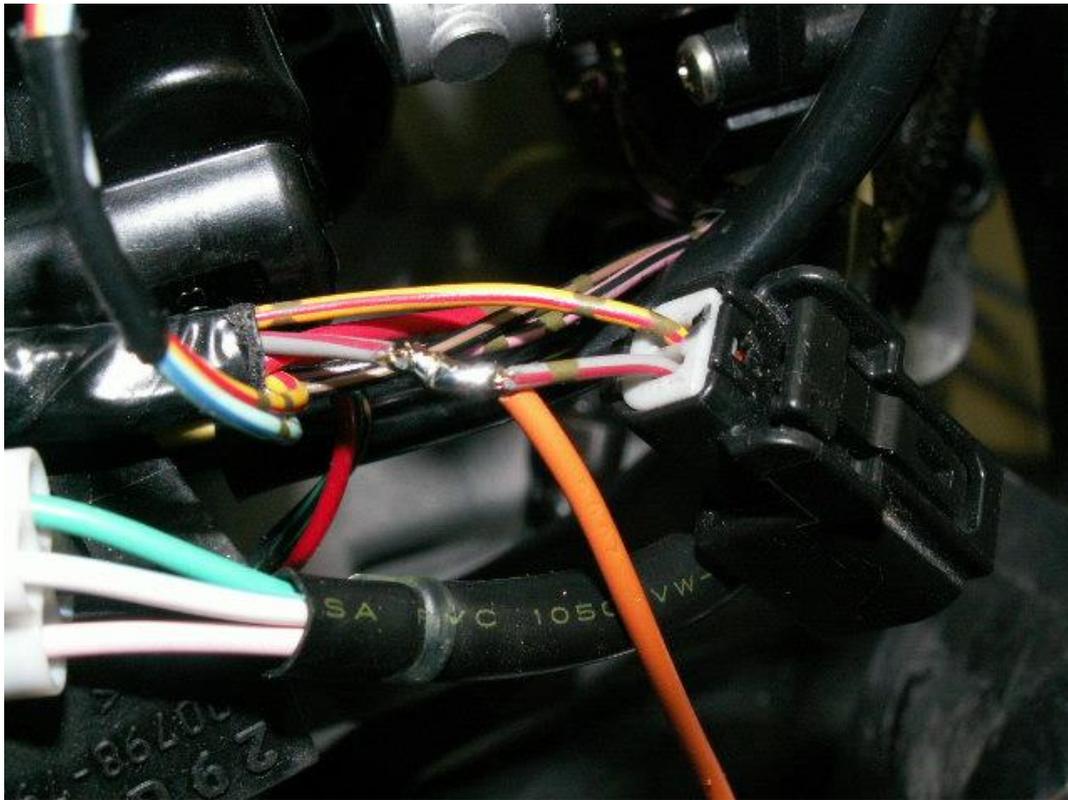

The orange rpm-signal to the new EFI-box shall be installed to the signal wire to one of the stock /lower injectors. Use solder and insulate the connection carefully.

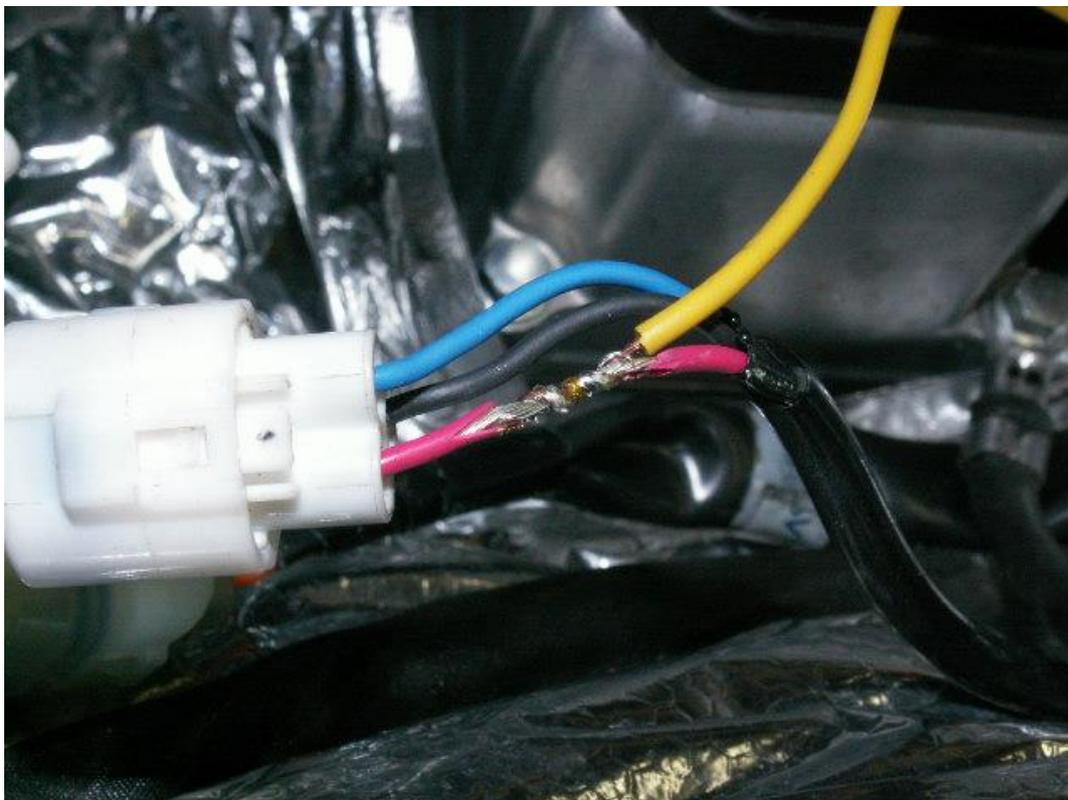

Connect the yellow wire from the EFI-box to the pink wire that comes from the clutch cover. This is the gear position signal wire. The EFI-box is programmed to make different turbo pressure on each gear. If you don't want this, don't connect this yellow wire.

The wires that shall be connected to the TCV-valve is a double blue and brown wire.



The TCV valve (=Turbo control valve) is installed on the hose to the waste gate actuator like this.

This valve is ruled by signals from the EFI-box.

It is possible to adjust the EFI box, both turbo pressure and fuel map.

This has to be done from a PC through the display unit that can be bought as an option



Install the pressure gauge like the picture.

Start the engine

You can start the engine before you put on the fairings.
It's easier to see if something is leaking and it's faster to repair.

Important: Before you start the engine, make sure water and oil is filled.

Check all the oil-fittings, hose-clamps and make sure everything is ready for use.

Fill unleaded fuel, highest octane pump gas in the tank.

Turn on the ignition key.

Start the engine. Search for leaks.

Stop the engine and check oil and water level.

Now you can make your first test-drive on the road (or dyno if possible).

Be very careful before you have got used with the turbo power.

Drive on high gears when you check the turbo pressure.

We recommend about 0.9 bar pressure.

Important: Always use unleaded high-octane pump gas.

Use high quality motor oil.

Drive slowly the last kilometer before you stop the engine.

(It's not necessary to let the engine idle long time before you stop)

Fairing modifications



Some plastic stays must be removed from the inside of the left fairing.